

Vibrant™ Laundry Detergent

Biodegradable, Earth Friendly Laundry Detergent

With all the environmental toxins that you face daily, something as simple as washing your clothes should not be a concern.

Vibrant™ Laundry Detergent is designed to keep your clothes looking cleaner and brighter, yet is gentle on you, your family and on the environment.

Vibrant Laundry Detergent is concentrated so you use less detergent without compromising cleanliness. Our liquid detergent contains safe and effective foaming agents designed to emulsify and hold soils in suspension, then rinse them freely away. You will love the pleasant fragrance that neutralizes odors that may have built up in fabrics from using other, less efficient products in the past.

Hard water? No problem. **Vibrant Laundry Detergent** functions well in hard water by utilizing special agents that bind minerals found in water that normally inhibit a detergent's cleaning power. This assures that the cleaning and rinsing action of **Vibrant Laundry Detergent** is significantly increased rather than bound up and neutralized. Vibrant removes the factors that cause garment graying. Lipsticks, butter, salad oils, dirty shirt collars, and other stubborn stains may be removed by applying **Vibrant Laundry Detergent** directly on the stain and gently rubbing in for a few minutes before putting into the wash, thus offering a substantial savings over having to purchase a separate spot or stain remover.

Don't let another wash day pass using ordinary laundry detergent. Clean, concentrated, and nontoxic to you and your family. Let **Vibrant Laundry Detergent** make your home a Sisel-Safe® home today.



Cleaner,
Brighter
Laundry
Without
Hurting the
Environment



BUY NOW

sisel®



FEATURES AND BENEFITS

- Biodegradable & Earth friendly
- High concentration saves time and money
- No toxins or harmful chemicals
- Works well with high efficiency machines

DIRECTIONS

For small to medium loads, use 30 ml or ½ capful. For larger loads or heavily soiled loads, use 60 ml or 1 capful. To evenly dispense add detergent directly to wash water or dispenser before loading the laundry.

CAUTION

Eye irritant. In case of eye contact, rinse eye(s) thoroughly with clean water for fifteen (15) minutes and then call a physician. Do not swallow. If swallowed, drink a glass of clean water and call a physician. Skin irritant. Wash skin immediately if directly contacted. Once detergent has been added to wash water, it is not considered to be a skin irritant. Keep out of the reach of children.

*These statements have not been evaluated by the Food and Drug Administration. This product is not intended to diagnose, treat, cure or prevent any disease.

Vibrant™ Laundry Detergent

Biodegradable, Earth Friendly Laundry Detergent

900 mL / 30.4 fl oz

INGREDIENTS:

Water (Aqua, Eau), Sodium Dodecylbenzene Sulfonate, Sodium Methyl 2-Sulfolaurate, Disodium 2-Sulfolaurate, Sodium Polyacrylate, Caprylyl/Capryl Glucoside, Sodium Citrate, Sodium Carbonate, Protease, Mannase, Cellulase, Lipase, Fragrance, Methylchlorisothiazolinone, Methylisothiazolinone, Disodium Distyrylbiphenyl Disulfonate, Amylase, Sodium Copper Chlorophyllin.



Manufactured for:
Sisel International, LLC
1328 West Spring Creek Place
P.O. Box 369, Springville, UT 84663

Sisel International AG
Grundacher 5
6060 Sarnen, Switzerland



Take advantage of the Sisel opportunity today. Get started by contacting the person who gave you this flyer, or go online at www.sisel.net for more information.

MANUFACTURED IN USA
F129520-10-01